

 
 





 

 


 













Original	Replacement
 Power	 Power
 Program	 TV/Radio /
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/-
 Play	 Play / Slow
 C	 Exit / Cancel / Clear
 I<< Skip/Frame	 I<< / Preset-

Original	Replacement
 << Slow/Search	 << / Tune-
 Slow/Search >>	 >> / Tune+
 Skip/Frame >>I	 >>I / Preset+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Title	 Sound / Title
 Menu	 Menu / Home
 Display	 Display / Media
 Search Mode	 Red / Netflix / Search
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Select	 OK
 Return	 Back / Return
 Zoom	 Zoom / Size
 Subtitle	 Subtitle / EQ





	Original	Replacement	Original	Replacement
	AUDIO	LANG I/II AUDIO		
	ANGLE	ANGLE INFO		
	TIME	TIMER SLEEP		
	Repeat	APP REPEAT		
	A→B	YouTube REPEAT A-B		

