

 
 
 
 





 

 

 


Original	Replacement
	 Power
	 TV/R
	 AV
	 Dual
	 Shift + 1
	 Shift + 2
	 Shift + 3
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0

Original	Replacement
	 Blue
	 I<<
	 Yellow
	 >>I
	 Smart
	 Green
	 Play
	 Red
	 Stop
	 Vol +
	 Vol -
	 Ch +
	 Up
	 Down
	 Ch -
	 Right
	 Left





Original	Replacement	Original	Replacement
	OK		Ok
	Info		Info
	Pause		Pause
	Text		Text
	Mute		Mute
	Menu		Menu
	EPG		Guide

