



Original	Replacement	Original	Replacement
Power Receiver	Power	3 Tuner	Shift + 3
DVD	2	HDMI Out	AV / Input / RDS
BD	1	4 Tuner	Shift + 4
DVR	5	Signal Sel	Shift + Setup / OPT / Tools
HDMI	0	MCACC	Fav / Marker / PC
TV	TV/Radio /	5 Tuner	Shift + 5
CD	3	6 Tuner	Shift + 6
CD-R	9	Sleep	Sleep / Timer
Home Media	Shift + Menu /	7 Tuner	Shift + 7
iPod / USB	8	SBch	Eject / Surround
Tuner	6	8 Tuner	Shift + 8
Video 1	4	A.ATT.	Yellow / YouTube / Repeat
Video 2	7	9 Tuner	Shift + 9
Input Select	Shift + Left	Dimmer	Shift + Mute / Dimmer
1 Tuner	Shift + 1	D.Access	Shift + D.Menu / Top Menu
Input Select	Shift + Right	CH Level	Shift + CH+ /
2 Tuner	Shift + 2	0 Tuner	Shift + 0





Original	Replacement
Class	Shift + Display / Media
Enter (Class)	Shift + OK
Master Volume	Vol+
Master Volume	Vol-
Mute	Mute / Dimmer
Top Menu	D.Menu / Top
Band	Subtitle / EQ
Audio	Audio / Lang I/II
Tune+	Shift + >> /
Up	Up
Tools	Setup / OPT /
T.Edit	Text / Goto
Video	Picture / Format
Left	Left
Preset -	Shift + <<< / Preset-
Enter	OK
Preset +	Shift + >>> / Preset+

Original	Replacement
Right	Right
iPod CTRL	Smart / List
Home Menu	Menu / Home
Tune-	Shift + <<< /
Down	Down
Return	Back / Return
Auto / Alc / Direct	Info / Angle
Stereo	Sound / Title
Repeat	Green / APP / Repeat
Standard	Shift + Smart / List
Random	Blue / Prime Video / Random
Adv. Surr.	Guide / EPG / -/-
<<	<<< / Tune-
Phase CTRL	Red / Netflix / Search
Play	Play / Slow
>>	>>> / Tune+
Status	Exit / Cancel / Clear





	Original	Replacement	Original	Replacement
	I<<	I<< / Preset-		
	Pause	Pause / Step / Freeze		
	MPX	Zoom / Size		
	PQLS	+ Shift + Info / Angle		
	Stop	Stop / Hold		
	>>I	>>I / Preset+		
	Audio DVD	+ Shift + Audio / Lang I/II		
	Disp	Display / Media		
	CH -	CH- / Page-		
	CH +	CH+ / Page+		





Original	Replacement
Power Source	Power
DVD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Top Menu	D.Menu / Top
Up	Up
Left	Left
Enter	Shift + OK
Enter	OK

Original	Replacement
Right	Right
Down	Down
Return	Back / Return
Menu	Menu / Home
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
I<<	I<< / Preset-
Pause	Pause / Step / Freeze
Stop	Stop / Hold
>>I	>>I / Preset+
Audio	Audio / Lang I/II





Original	Replacement
Power Source	Power
Tuner	Shift + 6
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
D.Access	D.Menu / Top
0	0
Class	CH- / Page-
Master Volume	Vol+
Master Volume	Vol-
Mute	Mute / Dimmer

Original	Replacement
Band	Smart / List
Tune+	>> / Tune+
Tune+	Up
T.Edit	Text / Goto
Preset-	Left
Preset-	I<< / Preset-
Enter	OK
Preset+	>>I / Preset+
Preset+	Right
Search	Red / Netflix / Search
Tune-	<< / Tune-
Tune-	Down
Menu	Menu / Home
MPX	CH+ / Page+
Disp	Display / Media

