





 


 




 












 



 
 
 

 




 
 

 


 


 

 


 
 
 

 













Original	Replacement	Original	Replacement
 Power On	 Power	 Stop	 Stop
 Standby	 Shift + Power	 </Pause	 Pause
 Input	 AV	 >> /Preset+	 >>
 Mute	 Mute	 <</Preset-	 <<
 Vol Up	 Shift + Right	 >>/Tune+	 >>
 Vol Down	 Shift + Left	 <</Tune-	 <<
 Volume+	 Vol +	 Setup/Home	 Media
 Volume-	 Vol -	 Test/Disc Menu	 Menu
 T/CH Level	 Smart	 Dimmer/Return	 Back
 CH/Album Up	 Ch +	 Display	 Info
 CH/Album Down	 Ch -	 RDM/Room2	 Exit
 Up	 Up	 Audio	 Options
 Down/Search	 Down	 Surround/Play List >	 Green
 Sel >	 Right	 < Surround/Play List	 Red
 < Sel	 Left	 Stereo/Play M	 TV/R
 Enter	 Ok	 1 / Tuner	 1
 Play	 Play	 2 / CD	 2






 



 









 











 


 
 

 
 
 
 

 

 
 
 
 
 
 
 
 
 



 


 


Original	Replacement	Original	Replacement
F.AUX 3	3 / F.Aux 3	3	3
TAPE 4	4 / Tape 4	4	4
BT IN 5	5 / BT In 5	5	5
VIDEO 1 6	6 / Video 1 6	6	6
VIDEO 2 7	7 / Video 2 7	7	7
VIDEO 3 8	8 / Video 3 8	8	8
9	9	9	9
0	0	0	0
+10	10	-/-- GUIDE	Guide
EXT.IN	Ext In	D	Blue
SLEEP	Sleep	PROG SLEEP	Sleep
AVR	AVR	SHIFT + 1	Shift + 1
RECALL DOCK	Dock	SHIFT + 2	Shift + 2
SELECT CD	CD	SHIFT + 3	Shift + 3
AUX	AUX	SHIFT + 4	Shift + 4
BD	BD	SHIFT + 5	Shift + 5
TV	TV	SHIFT + 6	Shift + 6

Original	Replacement
SAT	SAT
CBL	CBL
	SHIFT + 7 Shift + 7
	SHIFT + 8 Shift + 8









 







 









 

 
 




Original	Replacement	Original	Replacement
 Power On	 Power	 Audio	 Dual
 Standby	 Shift + Power	 Subtitle	 Subt
 Up	 Up	 1	 1
 Down	 Down	 2	 2
 Right	 Right	 3	 3
 Left	 Left	 4	 4
 Enter	 Ok	 5	 5
 Setup/Home	 Media	 6	 6
 Test/Disc Menu	 Menu	 7	 7
 Play	 Play	 8	 8
 Stop	 Stop	 9	 9
 >>	 >>	 0	 0
 <<	 <<		
 I<<	 I<<		
 >>I	 >>I		
 Display	 Info		
 Dimmer/Return	 Back		





	Original	Replacement	Original	Replacement
	CD			Power
	Play			Play
	Stop			Stop
	Pause			Pause
	I<<			I<<
	>>I			>>I
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0





Original	Replacement	Original	Replacement
 Power On	 Power	 Audio	 Options
 Standby	 Shift + Power	 < Surround/Play List	 Red
 RDM/Room2	 Exit	 Surround/Play List >	 Green
 CH/Album Up	 Ch +	 Stereo/Play M	 TV/R
 CH/Album Down	 Ch -	 Sleep / Dock M.	 Sleep
 Play	 Play		
 Pause	 Pause		
 Stop	 Stop		
 >>	 >>		
 <<	 <<		
 I<<	 I<<		
 >>I	 >>I		
 Test/Disc Menu	 Menu		
 Display	 Info		
 Enter	 Ok		
 Up	 Up		
 Down	 Down		

