
 
 
 


 

 


 
 


 





 







 

 



 
 

 
 
 



 

 


Original	Replacement	
On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Slow Up		Ch +
Pause		Pause
Auto/Track		Smart
Stop		Stop
Subt.		Subt
Title		List
Rep/A-B		TV/R
Pepeat/1/All		Text
Zoom		Shift + Eject
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Return		Back


 
 


 






 
 


 




 


 


 

 

 



Original	Replacement	
Menu Left		Left
OK Enter		Ok
Progr.		Sleep
Next		>>
Menu Right		Right
Prev.		<<
Menu Down		Down
Volume+		Vol +
Volume-		Vol -
Top Menu		D. Menu
1		1
2		2
3		3
4		4
5		5
Store		Red
6		6





 

 
 





 
 


 
Original	Replacement	Replacement
Digest		Green
7		7
Open/Close		Eject
8		8
9		9
Clear/00:00		Exit
+10		Guide
Record		Rec
Auto Scan		Media
Rewind		<<
Play		Play
F.Forward		>>
Setup		Options
Audio		Dual
3D		3D
0		0
C/CH		Pre Ch

Original	Replacement	Replacement
Angle		Format
Np	 + 	Shift + Subt
Info	 + 	Shift + Info


 




 
 



 



 



Original	Replacement	Original	Replacement
On/Off	 Power	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Stop	 Stop	Return	 Exit
Pause	 Pause	Menu Down	 Down
Slow Up	 Ch +	Progr.	 Back
Slow Down	 Ch -	Volume+	 Vol +
Subt.	 Subt	Top Menu	 D. Menu
Auto/Track	 Sleep	Next	 >>I
Rep/A-B	 TV/R	Volume-	 Vol -
Zoom	 +  Shift + Eject	1	 1
Title	 List	2	 2
Pepeat/1/All	 Text	3	 3
DVD/TV	 AV	Prev.	 I<<
Menu	 Menu	4	 4
Menu Up	 Up	5	 5
Display	 Info	6	 6
Menu Left	 Left	7	 7






 

 
 
 


Original	Replacement	Original	Replacement
8		8	
Video			
9		9	
+10			
0		0	
C/CH			
Rewind		<<	
Random			
Angle			
R/L	 + 	Shift + Info	
Play		Play	
Record		Rec	
F.Forward		>>	
3D		3D	
Open/Close		Eject	
Audio		Dual	


 

 


Original	Replacement	
On/Off		Power
Audio Off		Mute
Slow Down		Ch -
Slow Up		Ch +
Auto/Track		Smart
Stop		Stop
Subt.		Subt
Pause		Pause
Zoom		Shift + Eject
Title		List
Rep/A-B		TV/R
Pepeat/1/All		Text
DVD/TV		AV
Menu		Menu
Menu Up		Up
Display		Info
Menu Left		Left

Original	Replacement	
OK Enter		Ok
Menu Right		Right
Return		Back
Menu Down		Down
Next		>>
Progr.		Sleep
Volume+		Vol +
Top Menu		D. Menu
Volume-		Vol -
Prev.		<<
1		1
2		2
3		3
4		4
5		5
6		6
7		7



Original	Replacement	Original	Replacement
8		8	8
Open/Close		Eject	Eject
Mode		Media	Media
9		9	9
Setup		Options	Options
+10		Guide	Guide
3D		3D	3D
0		0	0
C/CH		Pre Ch	Pre Ch
Play/Back	 + 	Shift + Left	Shift + Left
Resume	 + 	Shift + Play	Shift + Play
Play		Play	Play
Karaoke/Step	 + 	Shift + Pause	Shift + Pause
Np	 + 	Shift + Subt	Shift + Subt
Record		Rec	Rec
F.Forward		>>	>>
Rewind		<<	<<

Original	Replacement	Original	Replacement
Store	 + 	Shift + Down	Shift + Down
Angle		Format	Format
Lang		Dual	Dual

