





 








 

 



 
 


 

 


 





 

 

 
 


 





	Original	Replacement		Original	Replacement
	Power		Power		Tv Display
	Mute		Mute		Up
	1		1		Down
	2		2		Right
	3		3		Left
	4		4		Enter
	5		5		Vol+
	6		6		Vol-
	7		7		S.M.
	8		8		P.M.
	9		9		CH+
	0		0		CH-
	.	 + 	Shift + Guide		EPG Page Up
	Recall		Back		EPG Page Down
	Menu		Menu		Sleep
	Source		AV		P.G.
	Exit		Exit		Aspect
					Info
					Up
					Down
					Right
					Left
					Ok
					Vol +
					Vol -
					Smart
					Media
					Ch +
					Ch -
				 + 	Shift + Up
				 + 	Shift + Down
					Sleep
					Format
					3D





Original	Replacement	Original	Replacement
 CH List	 List		
 EPG	 Guide		
 FAV	 Pre Ch		
 DTV Strenght	 D. Menu		
 TV	 TV/R		
 AV	 Eject		
 HDMI	 Text		
 YPbPr	 Shift + Format		
 CC	 Subt		
 MTS/SAP	 Dual		
 VGA	 Options		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		

