












 































 
































 













Original		Replacement		Original	Replacement
	Power		Power		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	Vol+		Vol+		
	CH+		CH+ / Page+		
	Vol-		Vol-		
	Mute		Mute / Dimmer		
	CH-		CH- / Page-		
	Source		AV / Input / RDS		





 

 









 


 











Original	Replacement	Original	Replacement
 Power	 Power	 Red	 Red / Netflix / Search
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Exit	 Exit / Cancel / Clear
 6	 6	 Down	 Down
 7	 7	 i	 Info / Angle
 8	 8	 CH+	 CH+ / Page+
 9	 9	 CH-	 CH- / Page-
 0	 0		
 Menu	 Menu / Home		
 <<	 << / Tune-		
 Play	 Play / Slow		
 >>	 >> / Tune+		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		















Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Menu		Menu / Home
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Stop		Stop / Hold

Original	Replacement	Original	Replacement
	Pause		Pause / Step / Freeze
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Media		Display / Media
	Up		Up
	Guide		Guide / EPG / -/-
	Left		Left
	OK/List		OK
	OK/List	 + 	Shift + Smart / List
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down
	Last		Back / Return
	Vol+		Vol+
	Info		Info / Angle







 


Original	Replacement	Original	Replacement
 CH+	 CH+ / Page+	 Source	 AV / Input / RDS
 Vol-	 Vol-	 Wide	 Zoom / Size
 Mute	 Mute / Dimmer	 V-Format	 Picture / Format
 CH-	 CH- / Page-		
 I>	 Shift + Play /		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 ?	 D.Menu / Top		
 Audio	 Audio / Lang I/II		
 [...]	 Subtitle / EQ		
 [+≡]	 Sound / Title		
 [≡≡]	 Smart / List		
 OPT+	 Setup / OPT /		
 Edit	 Fav / Marker / PC		
 Teletext	 Text / Goto		
 Tv/Radio	 TV/Radio /		
 Sleep	 Sleep / Timer		

Original	Replacement
	
	
	





Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 7	 7
 8	 8
 9	 9
 0	 0
 Menu	 Menu / Home
 <<	 << / Tune-
 >>	 >> / Tune+
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK/List	 OK

Original	Replacement
 OK/List	 Smart / List
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Vol+	 Vol+
 Info	 Info / Angle
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 CH-	 CH- / Page-

