




Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Open/Close	 Eject
 Mute	 Mute
 V.Sel	 Smart
 AV	 AV
 DVD	 Media
 Tuner	 TV/R
 Mode	 Format
 Tone	 Subt
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7

Original	Replacement
 8	 8
 9	 9
 0	 0
 Title/Rotate	 Guide
 Menu	 Menu
 Info	 Info
 Exit	 Exit
 I<	 I<<
 >I	 >>I
 <<	 <<
 >>	 >>
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +





Original	Replacement	Original	Replacement
 Vol-	 Vol -		
 Stop/FM Mode	 Stop		
 Play	 Play		
 Pause/RDS Search	 Pause		
 RDS/Disp/Clear	 Options		

Original	Replacement

