







 
 

 











 
 
 

 




| Original | Replacement |
|---------------|-------------|
| Power | Power |
| Input | AV |
| Monitor On | Shift + 1 |
| Monitor Off | Shift + 2 |
| Energy Saving | Shift + 3D |
| 3D | 3D |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| 1/a/A | Guide |

| Original | Replacement |
|----------------------|--------------|
| Clear | Shift + Exit |
| Vol+ | Vol + |
| Vol- | Vol - |
| Mute | Mute |
| Auto | List |
| ARC | Media |
| Brightness/Page | Ch + |
| Brightness/Page Down | Ch - |
| PSM | Subt |
| Home | Smart |
| W.BAL | TV/R |
| Settings | Options |
| S.Menu | Menu |
| Back | Back |
| Exit | Exit |
| Up | Up |
| Down | Down |





| Original | Replacement | Original | Replacement |
|--|--|----------|-------------|
|  Right |  Right | | |
|  Left |  Left | | |
|  OK |  Ok | | |
|  Simplink |  Format | | |
|  Title |  Dual | | |
|  Stop |  Stop | | |
|  << |  << | | |
|  Play |  Play | | |
|  Pause |  Pause | | |
|  >> |  >> | | |
|  Red/Picture On |  Red | | |
|  Green/Picture Off |  Green | | |
|  Yellow/Picture Off |  Yellow | | |
|  Blue |  Blue | | |
| | | | |
| | | | |
| | | | |

