 







 




 



 





 


 
 
 
 







 




 
 

 
 




 




 

 

 
 










	Original	Replacement		Original	Replacement
	Power		Power		Preset Up
	Sleep		Sleep		Preset Down
	Vol+		Vol +		Tuning Up
	Vol-		Vol -		Tuning Down
	Tuner		Smart		Memo
	Function		Media		Band
	1		1		Eon
	2		2		Panel
	3		3		CT
	4		4		PTY
	5		5		RDS
	6		6		Play CD
	7		7		Stop CD
	8		8		>> CD
	9		9		<< CD
	10		0		>> CD
	+10		Guide		<< CD
					Up
					Down
					Ch +
					Ch -
					Options
					TV/R
					Red
					Green
					Yellow
					Blue
					Subt
					Play
					Stop
					>>
					<<
					>>
					<<





Original		Replacement		Original		Replacement	
	Repeat		Text		Stop Deck		Ok
	Random		3D		1 CD		Shift + 1
	Edit		Dual		2 CD		Shift + 2
	Time Side A/B		AV		3 CD		Shift + 3
	Cancel		Exit		4 CD		Shift + 4
	Direct		Format		5 CD		Shift + 5
	Program		Shift + Sleep		6 CD		Shift + 6
	Play MD		Shift + Play		7 CD		Shift + 7
	Stop MD		Shift + Stop		8 CD		Shift + 8
	>>I MD		Shift + >>I		9 CD		Shift + 9
	I<< MD		Shift + I<<		10 CD		Shift + 0
	Reset		Back		+10 CD		Shift + Guide
	Rec Mute		Rec				
	>> Deck		Shift + Ch +				
	<< Deck		Shift + Ch -				
	< Deck		Left				
	> Deck		Right				

