













 




 

 
 




 



	Original	Replacement	Original	Replacement
	Start/Stop			Power
	Photo			Format
	Display			3D
	Zero			
	Data Code			
	T			
	W			
	Search Mode			
	I<<			
	>>I			
	<<			
	Play			
	>>			
	<  <			
	Stop			
	>  >			
	Pause	