



Original		Replacement		Original	Replacement
	ON / STANDBY		Power		
	INPUT		Source		
	Set Up		Auto		
	MENU		Menu		
	MUTE		Blank / Mute		
	Freeze		Freeze / Timer		
	UP		Up		
	LEFT		Left		
	ENTER		Enter		
	RIGHT		Right		
	DOWN		Down		
	RETURN		Mode		

