



Original	Replacement
 Power	 Power
 [ + ]	 Display / Media
 Mute	 Mute / Dimmer
 Tv/AV	 AV / Input / RDS
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol+
 Vol-	 Vol-
 Timer	 Sleep / Timer
 1	 1
 N	 D.Menu / Top
 F	 Menu / Home
 2	 2
 3	 3
 4	 4

Original	Replacement
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0/VCR	 0
 0/VCR	 Shift + 4
 Red	 Red / Netflix / Search
 C	 Exit / Cancel / Clear
 Green	 Green / APP / Repeat
 Blue	 Blue / Prime Video / Random
 Hold	 Shift + Stop /
 Yellow	 Yellow / YouTube / Repeat
 Index	 Info / Angle
 Pause/Step	 Pause / Step / Freeze
 Reveal	 Smart / List



