





 





 

 

 

 





| Original | Replacement |
|--|--|
|  Mute |  Mute / Dimmer |
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  ✓ |  Guide / EPG / -/-- |
|  0 |  0 |
|  Red / <<< |  Red / Netflix / Search |
|  Red / <<< |  <<< / Tune- |
|  Green / Stop |  Green / APP / Repeat |
|  Green / Stop |  Stop / Hold |

| Original | Replacement |
|---|---|
|  Yellow / Play |  Play / Slow |
|  Yellow / Play |  Yellow / YouTube / Repeat |
|  Blue / >>> |  >>> / Tune+ |
|  Blue / >>> |  Blue / Prime Video / Random |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  SFI |  D.Menu / Top |
|  Exit / Recall |  Back / Return |
|  Exit / Recall |  Exit / Cancel / Clear |
|  Info |  Info / Angle |
|  Prog + |  CH+ / Page+ |
|  TV / Radio |  TV/Radio / |
|  Vol + |  Vol+ |
|  Prog - |  CH- / Page- |





| Original | Replacement |
|---|---|
|  Menu |  Menu / Home |
|  Vol - |  Vol- |
|  TV/SAT |  Smart / List |
|  TXT |  Text / Goto |
|  Stop |  Pause / Step / Freeze |
|  EXT |  Display / Media |
|  SAT1 + OK |  Shift + 2 |
|  SAT2 + OK |  Shift + 3 |
|  TV + OK |  Shift + 1 |
|  PIP |  Picture / Format |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





| Original | Replacement |
|---|------------------------------|
|  | Mute / Dimmer |
|  | Power |
|  | 1 |
|  | 2 |
|  | 3 |
|  | 4 |
|  | 5 |
|  | 6 |
|  | 7 |
|  | 8 |
|  | 9 |
|  | Guide / EPG / -/-- |
|  | 0 |
|  | Shift + YouTube / Repeat A-B |
|  | << / Tune- |
|  | Red / Netflix / Search |
|  | Green / APP / Repeat |

| Original | Replacement |
|---|-----------------------------|
|  | Stop / Hold |
|  | Play / Slow |
|  | Yellow / YouTube / Repeat |
|  | >> / Tune+ |
|  | Blue / Prime Video / Random |
|  | Up |
|  | Left |
|  | OK |
|  | Right |
|  | Down |
|  | D.Menu / Top |
|  | Exit / Cancel / Clear |
|  | Back / Return |
|  | Info / Angle |
|  | CH+ / Page+ |
|  | TV/Radio / |
|  | Vol+ |





| Original | Replacement |
|--|---|
|  Mute |  Mute / Dimmer |
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  ✓ |  Guide / EPG / -/-- |
|  0 |  0 |
|  A/B |  Shift + Yellow / YouTube / |
|  Red / <<< |  Red / Netflix / Search |
|  Red / <<< |  <<< / Tune- |
|  Green / Stop |  Stop / Hold |

| Original | Replacement |
|---|---|
|  Green / Stop |  Green / APP / Repeat |
|  Yellow / Play |  Play / Slow |
|  Yellow / Play |  Yellow / YouTube / Repeat |
|  Blue / >>> |  >>> / Tune+ |
|  Blue / >>> |  Blue / Prime Video / Random |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  SFI |  D.Menu / Top |
|  Exit / Recall |  Back / Return |
|  Exit / Recall |  Exit / Cancel / Clear |
|  Info |  Info / Angle |
|  Prog + |  CH+ / Page+ |
|  TV / Radio |  TV/Radio / |
|  Vol + |  Vol+ |





| Original | Replacement |
|-----------|-----------------------|
| Prog - | CH- / Page- |
| Menu | Menu / Home |
| Vol - | Vol- |
| TV/SAT | Smart / List |
| TXT | Text / Goto |
| Stop | Pause / Step / Freeze |
| EXT | Display / Media |
| SAT1 + OK | Shift + 2 |
| SAT2 + OK | Shift + 3 |
| TV + OK | Shift + 1 |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

