






 

 





























 









 






 





































Original	Replacement
 Power Source	 Shift + Power
 Power Receiver	 Power
 HDMI 1	 Red / Netflix / Search
 HDMI 2	 Green / APP / Repeat
 HDMI 3	 Yellow / YouTube / Repeat
 HDMI 4	 Blue / Prime Video / Random
 HDMI 5	 Shift + 5
 HDMI 6	 Shift + 0
 HDMI 7	 Shift + 9
 V-AUX	 Shift + 7
 AV 1	 Shift + Red / Netflix /
 AV 2	 Shift + Green / APP /
 AV 3	 Shift + Yellow / YouTube /
 AV 4	 Shift + Blue / Prime /
 AV 5	 Shift + Guide / EPG / -/-
 AV 6	 Shift + Fav / Marker / PC
 Audio 1	 Shift + 1

Original	Replacement
 Audio 2	 Shift + 2
 Tuner	 Shift + 6
 USB	 Shift + 8
 Net	 Shift + 4
 Phono	 Shift + 3
 Party	 TV/Radio /
 HDMI Out	 AV / Input / RDS
 BD/DVD Scene	 Shift + Up
 TV Scene	 Shift + Left
 NET Scene	 Shift + Right
 Radio Scene	 Shift + Down
 Program Up	 CH+ / Page+
 Volume+	 Vol+
 Program Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Top Menu	 D.Menu / Top






 

 
 
 














Original	Replacement
 Pop-Up Menu	 Menu / Home
 On Screen	 Text / Goto
 Up	 Up
 Option	 Setup / OPT /
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Display	 Display / Media
 Mode	 Smart / List
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play/Band	 Play / Slow
 << Tuning	 << / Tune-
 Tuning >>	 >> / Tune+
 I<< Preset	 I<< / Preset-

Original	Replacement
 Preset >>	 >> / Preset+
 Movie	 Sound / Title
 Music	 Audio / Lang I/II
 Sur. Decode	 Eject / Surround
 Straight	 Picture / Format
 Info	 Info / Angle
 Sleep	 Sleep / Timer
 Enhancer	 Subtitle / EQ
 Pure Direct	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8





















 







 

Original	Replacement
 Power Source	 Shift + Power
 Power Receiver	 Power
 HDMI 1	 Red / Netflix / Search
 HDMI 2	 Green / APP / Repeat
 HDMI 3	 Yellow / YouTube / Repeat
 HDMI 4	 Blue / Prime Video / Random
 HDMI 5	 Shift + 5
 HDMI 6	 Shift + 0
 HDMI 7	 Shift + 9
 V-AUX	 Shift + 7
 AV 1	 Shift + Red / Netflix /
 AV 2	 Shift + Green / APP /
 AV 3	 Shift + Yellow / YouTube /
 AV 4	 Shift + Blue / Prime
 AV 5	 Shift + Guide / EPG / -/-
 AV 6	 Shift + Fav / Marker / PC
 Audio 1	 Shift + 1

Original	Replacement
 Audio 2	 Shift + 2
 Tuner	 Shift + 6
 USB	 Shift + 8
 NET	 Shift + 4
 Phono	 Shift + 3
 Party	 TV/Radio /
 HDMI Out	 AV / Input / RDS
 BD/DVD Scene	 Shift + Up
 TV Scene	 Shift + Left
 NET Scene	 Shift + Right
 Radio Scene	 Shift + Down
 Volume+	 Vol+
 Mute	 Mute / Dimmer
 Volume-	 Vol-
 Top Menu	 D.Menu / Top
 Pop-Up Menu	 Menu / Home
 On Screen	 Text / Goto





Original	Replacement
	 Up
	 Setup / OPT /
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Display / Media
	 Smart / List
	 Stop / Hold
	 Pause / Step / Freeze
	 Play / Slow
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Info / Angle

Original	Replacement
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Guide / EPG / -/-
	 Fav / Marker / PC

