

 
 


 





 




 
 
 



 







 



 

 
 


 
 


 



 
 
 

 








 
 








 



Original	Replacement	Original	Replacement
 Power	 Power	 Sleep	 Sleep
 Mute	 Mute	 EPG / Guide	 Guide
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 Ok
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Aspect	 Eject
 9	 9	 P.Mode	 Format
 0	 0	 S.Mode	 Shift + Dual
 FAV	 Pre Ch	 CH+	 Ch +
 Info	 Info	 CH-	 Ch -
 Text	 Text	 Vol+	 Vol +
 Source	 AV	 Vol-	 Vol -
 Recall	 Back	 Subt	 Subt

Original	Replacement	Original	Replacement
 Power	 Power	 Sleep	 Sleep
 Mute	 Mute	 EPG / Guide	 Guide
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 Ok
 4	 4	 Right	 Right
 5	 5	 Down	 Down
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Aspect	 Eject
 9	 9	 P.Mode	 Format
 0	 0	 S.Mode	 Shift + Dual
 FAV	 Pre Ch	 CH+	 Ch +
 Info	 Info	 CH-	 Ch -
 Text	 Text	 Vol+	 Vol +
 Source	 AV	 Vol-	 Vol -
 Recall	 Back	 Subt	 Subt





Original	Replacement
 Lang	 Dual
 Rec List	 Smart
 USB / Media	 Media
 SOS / Help	 TV/R
 Select	 D. Menu
 Rec	 Rec
 Stop	 Stop
 Play / Pause	 Play
 Play / Pause	 Pause
 Goto	 3D
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 >>	 >>
 Red / Timer	 Red
 Red / Timer	 Shift + AV
 Green	 Green

Original	Replacement
 Yellow	 Yellow
 Blue	 Blue

