



 



 







 



 







 



































Original	Replacement	Original	Replacement
 TV/R	TV/Radio /	 RECALL	Back / Return
 POWER	Power	 0	0
 MUTE	Mute / Dimmer	 FAV 2	Shift + Fav / Marker / PC
 SLEEP	Sleep / Timer	 FAV 1	Fav / Marker / PC
 1	1	 MENU	Menu / Home
 2	2	 EXIT	Exit / Cancel / Clear
 3	3		Up / CH +
 SUB	Subtitle / EQ		Left
 4	4	 OK	OK
 5	5		Right / VOL +
 6	6		Down / CH -
 EPG 2	Shift + Guide / EPG / -/-		Red / Audio
 EPG 1	Guide / EPG / -/-		Red / Audio
 7	7		Blue / Info
 8	8		Blue / Info
 9	9		Green / APP / Repeat
 TXT	Text / Goto		Yellow / Zoom





Original	Replacement	Original	Replacement
 Yellow / Zoom	 Yellow / YouTube / Repeat		
 VOL+	 Vol+		
 Page+	 CH+ / Page+		
 VOL-	 Vol-		
 Page-	 CH- / Page-		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 PLAY	 Play / Slow		
 STOP	 Stop / Hold		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 PAUSE	 Pause / Step / Freeze		
 REC	 Rec / Rec Mode		

