 


 

 

 



 


 
 











 



 

 






Original	Replacement
 Power	 Power
 TV/SAT	 Smart
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 SAT	 Media
 FAV	 Pre Ch
 Menu	 Menu
 EPG	 Guide

Original	Replacement
 Recall	 Back
 Exit	 Exit
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Vol+	 Vol +
 Vol-	 Vol -
 CH&Page+	 Ch +
 CH&Page-	 Ch -
 Red / TTX	 Red
 Red / TTX	 Text
 Green / Sub.T	 Green
 Green / Sub.T	 Subt
 Yellow / Zoom	 Yellow
 Yellow / Zoom	 Eject





Original	Replacement	Original	Replacement
MP Blue / MP	D Blue		
TV/RADIO TV/Radio	SEARCH TV/R TV/R		
AUDIO Audio	SOUND DUAL Dual		
PAUSE Pause	II Pause		
POS POS	PICTURE FORMAT Format		
REC Rec	REC MODE Rec		
INFO Info	DISPLAY INFO Info		
P/N P/N	ECO 3D 3D		
T/S T/S	TIMER AV AV		

