


























 

 

 






Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Input	 AV
 Recall	 Back
 PP	 Smart
 Menu	 Menu
 Exit	 Exit

Original	Replacement
 Up / P+	 Up
 Up / P+	 Ch +
 Left	 Left
 OK	 Ok
 Right	 Right
 Down / P-	 Down
 Down / P-	 Ch -
 V+	 Vol +
 V-	 Vol -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Aspect	 Format
 Audio I-II	 Dual
 Text	 Text
 Text Reveal	 Play



