 















 



 

 





 








 





Original	Replacement
 Power Receiver	 Power
 DVD	 2
 TV	 1
 VCR	 4
 CD-R	 3
 TUN	 6
 Test Tone	 Display / Media
 Input ATT	 TV/Radio /
 FL Dimmer	 Shift + Mute / Dimmer
 CH Select	 Smart / List
 CH Level-	 CH- / Page-
 CH Level+	 CH+ / Page+
 Effect-	 << / Tune-
 Effect+	 >> / Tune+
 Remote Setup	 Setup / OPT /
 Standard	 Subtitle / EQ
 Adv.Surr.	 Eject / Surround

Original	Replacement
 Stereo	 Audio / Lang I/II
 Input Sel	 AV / Input / RDS
 Signal Select	 Sound / Title
 Midnight / Loudness	 Sleep / Timer
 Mute	 Mute / Dimmer
 Up/Tune+	 Up
 Up/Tune+	 Shift + >> /
 Left/ST-	 Left
 Left/ST-	 Shift + I<< / Preset-
 Enter	 OK
 Right/ST+	 Right
 Right/ST+	 Shift + >>I / Preset+
 Down/Tune-	 Down
 Down/Tune-	 Shift + << /
 Master	 Vol+
 Master Volume-	 Vol-
 TV Vol+	 Shift + Vol+



 



 





 































Original	Replacement	Original	Replacement
Tv Vol-	Shift + Vol-		
TV Input	Shift + AV / Input / RDS		
TV Power	Shift + Power		





Original	Replacement
 Power DVD	 Power
 1 DVD	 1
 2 DVD	 2
 3 DVD	 3
 4 DVD	 4
 5 DVD	 5
 6 DVD	 6
 7 DVD	 7
 8 DVD	 8
 9 DVD	 9
 0 DVD	 0
 +10 DVD	 Guide / EPG / -/-
 Menu DVD	 Menu / Home
 Top Menu DVD	 D.Menu / Top
 Master	 Vol+
 Master volume-	 Vol-
 Mute	 Mute / Dimmer

Original	Replacement
 Channel+ DVD	 CH+ / Page+
 Channel- DVD	 CH- / Page-
 Up DVD	 Up
 Down DVD	 Down
 Right DVD	 Right
 Left DVD	 Left
 Enter DVD	 OK
 Pause DVD	 Pause / Step / Freeze
 Rec DVD	 Rec / Rec Mode
 Play DVD	 Play / Slow
 << DVD	 << / Tune-
 >> DVD	 >> / Tune+
 >>I DVD	 >>I / Preset+
 Stop DVD	 Stop / Hold
 I<< DVD	 I<< / Preset-
 Audio DVD	 Audio / Lang I/II
 Sub Title DVD	 Subtitle / EQ











 











 







 



 







 






 


 


















Original	Replacement
Angle DVD	Info / Angle
Power VCR	Shift + Power
1 VCR	Shift + 1
2 VCR	Shift + 2
3 VCR	Shift + 3
4 VCR	Shift + 4
5 VCR	Shift + 5
6 VCR	Shift + 6
7 VCR	Shift + 7
8 VCR	Shift + 8
9 VCR	Shift + 9
0 VCR	Shift + 0
Disc VCR	Shift + Back / Return
Channel+ VCR	Shift + CH+ /
Channel- VCR	Shift + CH- /
Up VCR	Shift + Up
Down VCR	Shift + Down

Original	Replacement
Right VCR	Shift + Right
Left VCR	Shift + Left
Enter VCR	Shift + OK
Pause VCR	Shift + Pause / Step /
Play VCR	Shift + Play /
Stop VCR	Shift + Stop /
<< VCR	Shift + << /
>>I VCR	Shift + >>I / Preset+
>> VCR	Shift + >> /
I<< VCR	Shift + I<< / Preset-
Rec VCR	Shift + Rec / Rec Mode
















































Original	Replacement	Original	Replacement
 Power CD	 Power	 Channel- CD	 CH- / Page-
 1 CD	 1	 Up CD	 Up
 2 CD	 2	 Down CD	 Down
 3 CD	 3	 Right CD	 Right
 4 CD	 4	 Left CD	 Left
 5 CD	 5	 Enter CD	 OK
 6 CD	 6	 Pause CD	 Pause / Step / Freeze
 7 CD	 7	 Play CD	 Play / Slow
 8 CD	 8	 << CD	 << / Tune-
 9 CD	 9	 >> CD	 >> / Tune+
 0 CD	 0	 >> CD	 >> / Preset+
 +10 CD	 Guide / EPG / -/--	 I<< CD	 I<< / Preset-
 Disc CD	 Back / Return	 Stop CD	 Stop / Hold
 Master	 Vol+	 Power TVC	 Shift + Power
 Master Volume-	 Vol-	 1 TVC	 Shift + 1
 Mute	 Mute / Dimmer	 2 TVC	 Shift + 2
 Channel+ CD	 CH+ / Page+	 3 TVC	 Shift + 3





Original	Replacement
 4 TVC	 +  Shift + 4
 5 TVC	 +  Shift + 5
 6 TVC	 +  Shift + 6
 7 TVC	 +  Shift + 7
 8 TVC	 +  Shift + 8
 9 TVC	 +  Shift + 9
 0 TVC	 +  Shift + 0
 +10 TVC	 +  Shift + Guide / EPG / -/-
 Disc TVC	 +  Shift + Back / Return
 Menu TVC	 +  Shift + Menu /
 Up TVC	 +  Shift + Up
 Down TVC	 +  Shift + Down
 Right TVC	 +  Shift + Right
 Left TVC	 +  Shift + Left
 Enter TVC	 +  Shift + OK
 Pause TVC	 +  Shift + Pause / Step /
 Rec TVC	 +  Shift + Rec / Rec Mode

Original	Replacement
 Play TVC	 +  Shift + Play /
 Stop TVC	 +  Shift + Stop /
 << TVC	 +  Shift + << /
 >>I TVC	 +  Shift + >>I / Preset+
 >> TVC	 +  Shift + >> /
 I<< TVC	 +  Shift + I<< / Preset-





Original	Replacement	Original	Replacement
Power TUN	Power	Left TUN	Left
1 TUN	1	D.Access TUN	Play / Slow
2 TUN	2	Band TUN	Smart / List
3 TUN	3	T.Edit	Pause / Step / Freeze
4 TUN	4	Class TUN	<< / Tune-
5 TUN	5	RF ATT TUN	>> / Tune+
6 TUN	6	MPX TUN	Stop / Hold
7 TUN	7	Display TUN	Display / Media
8 TUN	8	Power CDR	Shift + Power
9 TUN	9	1 CDR	Shift + 1
0 TUN	0	2 CDR	Shift + 2
Master	Vol+	3 CDR	Shift + 3
Master volume-	Vol-	4 CDR	Shift + 4
Mute	Mute / Dimmer	5 CDR	Shift + 5
Up TUN	Up	6 CDR	Shift + 6
Down TUN	Down	7 CDR	Shift + 7
Right TUN	Right	8 CDR	Shift + 8





Original	Replacement
9 CDR	Shift + 9
0 CDR	Shift + 0
+10 CDR	Shift + Guide / EPG / -/-
Channel+ CDR	Shift + CH+ /
Channel- CDR	Shift + CH- /
Up CDR	Shift + Up
Down CDR	Shift + Down
Right CDR	Shift + Right
Left CDR	Shift + Left
Enter CDR	Shift + OK
Pause CDR	Shift + Pause / Step /
Play CDR	Shift + Play /
Stop CDR	Shift + Stop /
<< CDR	Shift + << /
Rec CDR	Shift + Rec / Rec Mode
I<< CDR	Shift + I<< / Preset-
>> CDR	Shift + >> /

Tune+

Original	Replacement
>>I CDR	Shift + >>I / Preset+

