





































 












Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / □	 0
 0 / □	 Display / Media
 Exit / TV/Radio	 TV/Radio /
 Exit / TV/Radio	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Vol+	 Vol+

Original	Replacement
 i	 Info / Angle
 Back	 Back / Return
 ●	 Rec / Rec Mode
 Menu	 Menu / Home
 Guide	 Guide / EPG / -/-
 P+	 CH+ / Page+
 P-	 CH- / Page-
 ↑	 Shift + CH+ /
 ↑	 >> / Preset+
 ↓	 Shift + CH- /
 ↓	 << / Preset-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Green / Option	 Setup / OPT /





Original	Replacement	Original	Replacement
 Red	 Red / Netflix / Search		
 Yellow / Text	 Yellow / YouTube / Repeat		
 Green / Option	 Green / APP / Repeat		
 Blue / Recall	 Fav / Marker / PC		
 Yellow / Text	 Text / Goto		
 Blue / Recall	 Blue / Prime Video / Random		

Original	Replacement



Mandis

Mandis