



Original	Replacement
Standby	Power
Open/Close	Eject / Surround
Up	Up
Down	Down
Right	Right
Left	Left
Set Up	Setup / OPT /
Return	Back / Return
Menu	Menu / Home
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Red	Red / Netflix / Search
Blue	Blue / Prime Video / Random
Play	Play / Slow
Pause/Step	Pause / Step / Freeze
Stop	Stop / Hold
I<<	I<< / Preset-

Original	Replacement
>>	>> / Preset+
<<	<< / Tune-
>>	>> / Tune+
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
10+	Guide / EPG / -/-
Audio	Audio / Lang I/II
Title	Sound / Title
Clear	Exit / Cancel / Clear





	Original	Replacement	
	Repeat	+ REPEAT	Shift + Green / APP /
	Prog		TV/Radio /
	Zoom		Zoom / Size
	V-Remote		Picture / Format
	Intro		OK
	EQ	+	Shift + Subtitle / EQ
	Karaoke		AV / Input / RDS
	Mark		Fav / Marker / PC
	Search	+	Shift + Red / Netflix /
	Display		Display / Media
	IS/PS		Smart / List
	Subtitle		Subtitle / EQ
	Vol+		Vol+
	Vol-		Vol-

Original	Replacement

