

 





 



 



 















 



 







 






 



 



 






 

 





 

 

 

 

 









Original	Replacement	Original	Replacement
 Power Audio	 Power	 0	 0
 Function	 Smart / List	 Subtitle	 Subtitle / EQ
 Input	 AV / Input / RDS	 Prog / Memo	 Fav / Marker / PC
 Sleep / Dimmer	 Sleep / Timer	 Repeat	 Green / APP / Repeat
 Sleep / Dimmer	 Shift + Mute / Dimmer	 Clear	 Exit / Cancel / Clear
 Return	 Back / Return	 Top Menu	 D.Menu / Top
 1	 1	 Up / Preset+	 Up
 2	 2	 Up / Preset+	 Shift + >>1 / Preset+
 3	 3	 Menu	 Menu / Home
 Surround	 Eject / Surround	 Left / Tuning-	 Left
 4	 4	 Left / Tuning-	 Shift + << /
 5	 5	 Enter	 OK
 6	 6	 Right / Tuning+	 Right
 Scan Mode	 TV/Radio /	 Right / Tuning+	 Shift + >> /
 7	 7	 Set Up	 Setup / OPT /
 8	 8	 Down / Preset-	 Down
 9	 9	 Down / Preset-	 Shift + I<< / Preset-





Original	Replacement	Original	Replacement
 Display	 Display / Media		
 Stop	 Stop / Hold		
 Play / FM Mode	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Volume+	 Vol+		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		
 Muting	 Mute / Dimmer		
 << / Slow-	 << / Tune-		
 >> / Slow+	 >> / Tune+		
 Volume-	 Vol-		

Original	Replacement

