

 




 


 

 

 



 

 

 
 

 

 



 

 

 
 
 

 
 


 

 

 

 

 

 

 





 

 

 





 

 
















Original	Replacement
 Power	 Power
 Sleep	 Sleep / Timer
 Input TV	 AV / Input / RDS
 Power TV	 Shift + Power
 Program	 TV/Radio /
 1	 1
 2	 2
 Repeat	 Green / APP / Repeat
 Function+	 CH+ / Page+
 3	 3
 EQ	 Shift + Subtitle / EQ
 4	 4
 DSGX	 Sound / Title
 5	 5
 Function-	 CH- / Page-
 6	 6
 Zoom	 Zoom / Size

Original	Replacement
 7	 7
 Dimmer	 Shift + Mute / Dimmer
 8	 8
 Time	 Shift + Sleep / Timer
 9	 9
 0	 0
 0/Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Angle	 Info / Angle
 DVD Top Menu	 Menu / Home
 DVD Menu	 D.Menu / Top
 Setup	 Setup / OPT /
 Display	 Display / Media
 Muting	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 Up	 Up





	Original	Replacement	Original	Replacement
	Down			
	Right			
	Left			
	OK			
	I<</Preset-			
	Pause			
	>>I/Preset+			
	<</Tuning-			
	Play			
	>>/Tuning+			
	Stop	