







 









 



















































 



 

 

 

 

 



 

 

 

 

 



Original	Replacement
 Power	 Power
 Red	 Red / Netflix / Search
 Mute	 Mute / Dimmer
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 NR	 Exit / Cancel / Clear
 Auto	 Display / Media
 Recall	 Back / Return
 Add	 Shift + TV/Radio / Program
 Dual	 Audio / Lang I/II
 Text	 Text / Goto
 Input	 AV / Input / RDS
 Up	 Up
 CH+	 CH+ / Page+
 Down	 Down

Original	Replacement
 CH-	 CH- / Page-
 Right	 Right
 Left	 Left
 Vol-	 Vol-
 Menu	 Menu / Home
 OK	 OK
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +100	 Guide / EPG / -/-
 0	 0





Original		Replacement	
	Last		Shift + Back / Return
	P.STD		Smart / List
	S.STD		Eject / Surround
	ARC		Stop / Hold
	Still		Pause / Step / Freeze
	Zoom-		Zoom / Size
	Zoom+		Setup / OPT /
	Multi-PiP		TV/Radio /
	Size		Shift + Zoom /
	S.Swap		Subtitle / EQ
	Win-Sel		D.Menu / Top
	Locate		Sound / Title
	Swap		Picture / Format

Original		Replacement	

