



Original	Replacement	Original	Replacement
 Power	 Power	 P+	 >>  / Preset+
 Mute	 Mute / Dimmer	 P-	 Shift + CH- /
 1	 1	 P-	  << / Preset-
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 Up	 CH+ / Page+
 7	 7	 Down	 CH- / Page-
 8	 8	 OK	 OK
 9	 9	 Right	 Vol+
 0	 0	 Fav	 Fav / Marker / PC
 TV	 TV/Radio /	 Left	 Vol-
 Radio	 Shift + TV/Radio / Program	 Info	 Info / Angle
 Menu	 Menu / Home	 Lang / Red	 Red / Netflix / Search
 Exit	 Exit / Cancel / Clear	 Lang / Red	 Audio / Lang I/II
 P+	 Shift + CH+ / Page+	 Pause / Blue	 Blue / Prime Video / Random

Page+

Original	Replacement	Original	Replacement
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			
			





Original	Replacement
Pause / Blue	Pause / Step / Freeze
Sound / Green	Green / APP / Repeat
Sound / Green	Sound / Title
Text / Yellow	Yellow / YouTube / Repeat
Text / Yellow	Text / Goto
SAT	+  Shift + 0
SAT	Smart / List
Recall	Back / Return
TV / SAT	Display / Media
EPG	Guide / EPG / -/--

Original	Replacement

