







 









 



































 
















 











 
 




Original	Replacement	Original	Replacement
	Power		Power
	A-B	 Yellow / YouTube / Repeat	Repeat
	Clear	 Exit / Cancel / Clear	Exit / Cancel / Clear
	Eject	 Eject / Surround	Eject / Surround
	Time	 Sleep / Timer	Sleep / Timer
	Resume	 Shift + Pause / Step /	Shift + Pause / Step /
	Prog	 TV/Radio /	TV/Radio /
	Mute	 Mute / Dimmer	Mute / Dimmer
	1	 1	1
	2	 2	2
	3	 3	3
	Audio	 Audio / Lang I/II	Audio / Lang I/II
	4	 4	4
	5	 5	5
	6	 6	6
	Subtitle	 Subtitle / EQ	Subtitle / EQ
	7	 7	7
	8	 8	8
	9	 9	9
	Zoom	 Zoom / Size	Zoom / Size
	0/10	 0	0
	10+	 Guide / EPG / -/-	Guide / EPG / -/-
	Ran	 Blue / Prime Video / Random	Blue / Prime Video / Random
	OSD	 Display / Media	Display / Media
	Return	 Back / Return	Back / Return
	Repeat	 Green / APP / Repeat	Green / APP / Repeat
	Menu	 Menu / Home	Menu / Home
	Vol+	 Vol+	Vol+
	Angle	 Info / Angle	Info / Angle
	Surround	 Shift + Eject / Surround	Shift + Eject / Surround
	Slow	 Shift + Play /	Shift + Play /
	Vol-	 Vol-	Vol-
	Setup	 Setup / OPT /	Setup / OPT /
	Up	 Up	Up





	Original	Replacement	Original	Replacement
		L/R		D.Menu / Top
		Left		Left
		Enter		OK
		Right		Right
		Stop		Stop / Hold
		Down		Down
		Play		Play / Slow
		N/P		Picture / Format
		PBC		Smart / List
		Title		Sound / Title
		Pause/Step		Pause / Step / Freeze
		I<<		I<< / Preset-
		>>I		>>I / Preset+
		<<		<< / Tune-
		>>		>> / Tune+

