

 

 

 
 
 
 

 
 
 
 




 

 


 

 


 


 





Original	Replacement	Original	Replacement
	Power		Yellow / YouTube / Repeat
	Text		Blue / Prime Video / Random
	Input		D.Menu / Top
	1		Pause / Step / Freeze
	2		Play / Slow
	3		Back / Return
	4		Exit / Cancel / Clear
	5		Up
	6		Down
	7		Left
	8		Right
	9		OK
	0		Vol+
	Guide		Vol-
	CH.List		Home
	Red / Netflix / Search		Mute / Dimmer
	Green / APP / Repeat		CH+ / Page+





Original		Replacement		Original		Replacement	
	CH-		CH- / Page-				
	[:::]		Setup / OPT /				
	Voice		Sound / Title				
	Media		Display / Media				
	Netflix		Shift + Red / Netflix /				
	YouTube		Shift + Yellow / YouTube /				
	prime video		Shift + Blue / Prime				
	Rakuten Tv		Shift + Green / APP /				

