









 



 

 


















Original	Replacement
	 Power
	 Sleep / Timer
	 Green / APP / Repeat
	 Red / Netflix / Search
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >>I / Preset+
	 Vol+
	 Vol-
	 Smart / List
	 Mute / Dimmer
	 Up
	 Down
	 OK

Original	Replacement
	 Menu / Home

