



























| Original | Replacement | Original | Replacement |
|---|---|---|---|
|  Power |  Power |  0/-- |  0 |
|  Main Menu |  Menu / Home |  AV |  AV / Input / RDS |
|  Tape |  Shift + 5 |  0000 |  Back / Return |
|  Programme |  Setup / OPT / |  SP/LP |  Picture / Format |
|  MEM |  Display / Media |  << |  << / Tune- |
|  Exit/Status |  Exit / Cancel / Clear |  Play |  Play / Slow |
|  Programme |  CH+ / Page+ |  >> |  >> / Tune+ |
|  Programme |  CH- / Page- |  Rec |  Rec / Rec Mode |
|  1 |  1 |  Stop |  Stop / Hold |
|  2 |  2 |  Pause |  Pause / Step / Freeze |
|  3 |  3 | | |
|  4 |  4 | | |
|  5 |  5 | | |
|  6 |  6 | | |
|  7 |  7 | | |
|  8 |  8 | | |
|  9 |  9 | | |

