

 

 



Original	Replacement
Power	Power
Mute	Mute / Dimmer
Tv/Radio	TV/Radio /
Audio	Audio / Lang I/II
Pause	Pause / Step / Freeze
CH Set	Smart / List
Page >	CH+ / Page+
< Page	CH- / Page-
Menu	Menu / Home
Exit	Exit / Cancel / Clear
Up/CH+	Up
Down/CH-	Down
Right	Right
Left	Left
OK	OK
Vol+	Vol+
Vol-	Vol-

Original	Replacement
Red/Last	Red / Netflix / Search
Green/TTX	Green / APP / Repeat
Yellow/PIP	Yellow / YouTube / Repeat
Blue/Zoom	Blue / Prime Video / Random
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Back	Back / Return
EPG	Guide / EPG / -/-
Info	Info / Angle





	Original	Replacement		Original	Replacement
	SIG	 Display / Media			
	FAV	 Fav / Marker / PC			
	SAT	 Shift + 0			

