



Original		Replacement		Original		Replacement	
	Power		Power		>>		>> / Preset+
	Function		TV/Radio /		<<		<< / Tune-
	Eject		Eject / Surround		>>		>> / Tune+
	Sleep		Sleep / Timer		Stop		Stop / Hold
	1 / RDS Display		1		Play		Play / Slow
	2		2		Pause		Pause / Step / Freeze
	3 / TA		3		Vol +		Vol+
	4 / PTY -		4		Mute		Mute / Dimmer
	5 / PTY Search		5		Tuning+ / CH +		CH+ / Page+
	6 / PTY +		6		Vol -		Vol-
	7		7		V-Sound		Sound / Title
	8		8		Tuning- / CH -		CH- / Page-
	9		9		Disc Menu		D.Menu / Top
	Full Screen		Zoom / Size		Menu		Menu / Home
	0		0		Title Menu / PopUp Menu		Shift + Menu /
	Repeat		Shift + Green / APP /		Tools		Setup / OPT /
	I<<		I<< / Preset-		Up		Up





Original		Replacement		Original		Replacement	
	Power		Power		Stop		Stop / Hold
	TV Source		AV / Input / RDS		Play		Play / Slow
	Sleep		Sleep / Timer		Pause		Pause / Step / Freeze
	1		1		Vol+		Vol+
	2		2		Mute		Mute / Dimmer
	3		3		CH+		CH+ / Page+
	4		4		Vol-		Vol-
	5		5		CH-		CH- / Page-
	6		6		Menu		Menu / Home
	7		7		Tools		Setup / OPT /
	8		8		Up		Up
	9		9		Info		Info / Angle
	0		0		Left		Left
	I<<		I<< / Preset-		Enter		OK
	>>I		>>I / Preset+		Right		Right
	<<		<< / Tune-		Return		Back / Return
	>>		>> / Tune+		Down		Down



