






Original	Replacement
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 +10	 Guide / EPG / -/--
 Stop	 Stop / Hold
 Play/Pause CD	 Play / Slow
 Tape	 Shift + 5
 Fade Muting	 Mute / Dimmer
 Clock/Sleep	 Smart / List

Original	Replacement
 FM/AM	 TV/Radio /
 Timer	 Sleep / Timer
 I<<	 I<< / Preset-
 << Preset	 << / Tune-
 >>I	 >>I / Preset+
 Preset >>	 >> / Tune+
 Tuning/Group/PTY	 CH+ / Page+
 Tuning/Group/PTY Down	 CH- / Page-
 PTY Search	 AV / Input / RDS
 Display/Progra	 Shift + Display / Media
 News/Info	 Info / Angle
 Display Mode	 Display / Media
 Repeat	 Green / APP / Repeat
 Random	 Blue / Prime Video / Random
 Sound Mode	 Sound / Title
 HBS	 Subtitle / EQ
 Vol+	 Vol+





	Original	Replacement	Original	Replacement
	Vol-		Vol-	

