

 






 


 











 







 











 

 



























 









 

 











Original	Replacement	Original	Replacement
	Power		Power
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	Cancel		Shift + Exit / Cancel / Clear
	VPS/PDC		Fav / Marker / PC
	Right VPS/PDC		Subtitle / EQ
	AV Link		Display / Media
	Timer Rec		Zoom / Size
	Right Av Link		Picture / Format
	OSD/Display		Info / Angle
	Reset		Setup / OPT /
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		OK
	Play		Play / Slow
	Stop		Stop / Hold
	Direct Tv Rec		TV/Radio /
	>>		>> / Tune+
	<<		<< / Tune-
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



 


 
 

 

 




















 




 
 


 
 


 



 

 













 







Original	Replacement	Original	Replacement
	0		0
	-/--		Guide / EPG / -/--
	AV/Input Select		AV / Input / RDS
	Tv/Text		Text / Goto
	Tracking/V-Lock+		CH+ / Page+
	Tracking/V-Lock-		CH- / Page-
	Pause/Slow		Pause / Step / Freeze
	Rec		Rec / Rec Mode
	Search		Shift + Red / Netflix /
	I<< Index		I<< / Preset-
	Index >>I		>>I / Preset+
	Vol+		Vol+
	Vol-		Vol-



















 





 

 

 
 
 









Original		Replacement		Original		Replacement	
	Power		Power		Reset		Setup / OPT /
	Prog/Check Up		Shift + Up		Direct Tv Rec		TV/Radio /
	Prog/Check		Shift + Down		Up		Up
	Date+		Shift + CH+ /		Down		Down
	Date-		Shift + CH- /		Right		Right
	On+		Sleep / Timer		Left		Left
	On-		Text / Goto		OK		OK
	Off+		Yellow / YouTube / Repeat		Play		Play / Slow
	Off-		Blue / Prime Video / Random		Stop		Stop / Hold
	Prog/Check		Guide / EPG / -/--		>>		>> / Tune+
	Cancel		Shift + Exit / Cancel / Clear		<<		<< / Tune-
	VPS/PDC		Fav / Marker / PC		Exit		Exit / Cancel / Clear
	Right VPS/PDC		Subtitle / EQ		Menu		Menu / Home
	Timer Rec		Zoom / Size		Show View		Audio / Lang I/II
	AV Link		Display / Media		1		1
	Right Av Link		Picture / Format		2		2
	OSD/Display		Info / Angle		3		3





	Original	Replacement		Original	Replacement
	4	 4		 Vol-	 Vol-
	5	 5			
	6	 6			
	7	 7			
	8	 8			
	9	 9			
	0	 0			
	-/--	 Shift + Guide / EPG / -/--			
	Tracking/V-Look+	 CH+ / Page+			
	Tracking/V-Look-	 CH- / Page-			
	AV/Input Select	 AV / Input / RDS			
	Pause/Slow	 Pause / Step / Freeze			
	Rec	 Rec / Rec Mode			
	Search	 Red / Netflix / Search			
	I<< Index	 I<< / Preset-			
	>>I Index	 >>I / Preset+			
	Vol+	 Vol+			

