















 






























Original	Replacement
Index / Text Subcode	 D.Menu / Top
TV Moni	 Smart / List
Zero Return	 Green / APP / Repeat
00:00:00	 Red / Netflix / Search
Pause / > <	 Pause / Step / Freeze
0 / AV	 AV / Input / RDS
0 / AV	 0
Trk+	 CH+ / Page+
Trk-	 CH- / Page-
Left / <<	 Left
Left / <<<	 << / Tune-
Right / >>	 >> / Tune+
Right / >>>	 Right
Down / Stop	 Stop / Hold
Down / Stop	 Down
Enter / Text Hold	 +  Shift + Stop /
Cancel / Text Size	 Zoom / Size

Original	Replacement
Cancel / Text Size	 Exit / Cancel / Clear
ATR / Text Reveal	 Display / Media
Enter / Text Hold	 OK
Up / Play	 Play / Slow
Timer Rec	 +  Shift + Sleep / Timer
Rec / OTR	 Rec / Rec Mode
Up / Play	 Up
Menu	 Menu / Home
Program	 TV/Radio /
Text / Mix	 Text / Goto
8	 8
Timer	 Sleep / Timer
Eject	 Eject / Surround
1	 1
2	 2
3	 3
4	 4



Original	Replacement	Original	Replacement
5	 5		
6	 6		
7	 7		
Power	 Power		
9	 9		
Info	 Info / Angle		
Vol+	 Vol+		
Vol-	 Vol-		
Mute	 Mute / Dimmer		

