






 




 
 
 

 






Original	Replacement	Original	Replacement
 Power	 Power	 OSD/Info	 Info / Angle
 1	 1	 Prog	 TV/Radio /
 2	 2	 Setup	 Setup / OPT /
 3	 3	 Menu	 Menu / Home
 4	 4	 Audio	 Audio / Lang I/II
 5	 5	 Title	 Shift + Sound / Title
 6	 6	 Subtitle	 Subtitle / EQ
 7	 7	 Timer	 Shift + Sleep / Timer
 8	 8	 +10	 Guide / EPG / -/-
 9	 9	 Sleep	 Sleep / Timer
 0	 0	 Play	 Play / Slow
 AUX	 Shift + 7	 Clock	 Back / Return
 USB	 Shift + 8	 Pause	 Pause / Step / Freeze
 Card	 Shift + 4	 Enter	 OK
 DVD	 Shift + 2	 Up/Preset+	 Up
 Tuner	 Shift + 6	 Down/Preset-	 Down
 Tape	 Shift + 5	 >>/Tun+	 >> / Tune+





Original	Replacement
 <</Tun-	 << / Tune-
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Repeat	 Green / APP / Repeat
 Goto	 Text / Goto
 Rec	 Rec / Rec Mode
 Vol-	 Vol-
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 Demo	 Picture / Format
 EQ	 Shift + Subtitle / EQ
 Bass	 Shift + Audio / Lang I/II
 St/Mono	 Sound / Title
 Bookmark	 Display / Media
 Intro	 D.Menu / Top
 Rand	 Blue / Prime Video / Random

Original	Replacement
 RDS/A-B	 AV / Input / RDS
 Zoom	 Zoom / Size
 P.Scan	 Eject / Surround
 Angle	 Shift + Info / Angle
 Step	 Shift + Pause / Step /
 Slow	 Shift + Play /

