
 


 


 
 











 


 
 



 
 

 



 

 
 


Original	Replacement
 Open/Close	 Eject / Surround
 Input Select	 AV / Input / RDS
 Standby	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Timer Prog	 Sleep / Timer
 Setup	 Setup / OPT /
 0	 0

Original	Replacement
 Clear	 Exit / Cancel / Clear
 [i+]/Info	 Info / Angle
 Text	 Text / Goto
 Variable Replay	 Vol+
 Variable Skip	 Vol-
 Guide	 Guide / EPG / -/-
 Top Menu	 D.Menu / Top
 Up	 Up
 Disc Menu	 Menu / Home
 Left	 Left
 Enter / OK	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 Return	 Back / Return
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





	Original	Replacement	Original	Replacement
	Yellow	 Yellow / YouTube / Repeat		O)/Audio
	Blue	 Blue / Prime Video / Random		Sat Link
	<<	 << / Tune-		
	Play	 Play / Slow		
	>>	 >> / Tune+		
	I<<	 I<< / Preset-		
	Stop	 Stop / Hold		
	>>I	 >>I / Preset+		
	Pause	 Pause / Step / Freeze		
	HDD	 Shift + 7		
	DVD	 Shift + 2		
	Time Slip	 TV/Radio /		
	Dubbing	 Picture / Format		
	Rec Mode	 Shift + Rec / Rec Mode		
	Rec	 Rec / Rec Mode		
	Subtitle	 Subtitle / EQ		
	AD	 Sound / Title		

