



 



















 



 





Original		Replacement	
	Stop		Stop / Hold
	Play		Play / Slow
	Disc Skip		Display / Media
	<</Preset		I<< / Preset-
	>>/Preset Up		>>I / Preset+
	Pause		Pause / Step / Freeze
	Memory		OK
	Clear		Exit / Cancel / Clear
	X-Bass		Audio / Lang I/II
	CD		3
	Tuner (Band)		6
	Tape		5
	On/Standby		Power
	Vol-		Vol-
	Vol+		Vol+

