 
 
 

 

 

 




 


 








 








 








 





















 





 

 

 

 

 

 

 



Original	Replacement	Original	Replacement
	Power		SOUND Sound / Title
	TV / DTV		+ VOL Vol+
	Source		+ CH PAGE CH+ / Page+
	1		VOL - Vol-
	2		DIMMER MUTE Mute / Dimmer
	3		CH PAGE - CH- / Page-
	4		HOME MENU Menu / Home
	5		EPG GUIDE EPG Guide / EPG / -/-
	6		Up
	7		Left
	8		OK
	9		Right
	Recall		Down
	0		I/II AUDIO Audio / Lang I/II
	Info		STEP - FREEZE II Pause / Step / Freeze
	Fav		SIZE ZOOM Zoom / Size
	Picture		CLEAR EXIT CANCEL Exit / Cancel / Clear





Original	Replacement
 Radio / Browse	 Display / Media
 T.Shift / Rotate	 Setup / OPT /
 Lang / Page Up	 Shift + CH+ /
 Lang / Page Up	 Shift + Audio / Lang I/II
 Subtitle / Page Down	 Shift + CH- /
 Subtitle / Page Down	 Subtitle / EQ
 DMP.	 Smart / List
 PVR	 D.Menu / Top
 Play / Pause	 Play / Slow
 Stop	 Stop / Hold
 Red / <<	 << / Tune-
 Red / <<	 Red / Netflix / Search
 Green / >>	 >> / Tune+
 Green / >>	 Green / APP / Repeat
 Yellow / I<<	 I<< / Preset-
 Yellow / I<<	 Yellow / YouTube / Repeat
 Blue / >>I	 Blue / Prime Video / Random

Original	Replacement
 Blue / >>I	 >>I / Preset+
 Text	 Text / Goto
 Size	 Shift + Zoom /
 Reveal	 Eject / Surround
 Cancel	 Shift + Exit / Cancel / Clear
 Hold / Sleep	 Shift + Stop /
 Hold / Sleep	 Sleep / Timer
 Index	 Shift + Info / Angle
 Sub. Code	 Shift + Subtitle / EQ
 Mix	 Shift + Text /

