
















































































Original	Replacement	Original	Replacement
On/Off	 Power	Menu video	 D.Menu / Top
Mute	 Mute / Dimmer	Game Coo	 Setup / OPT /
Update	 Play / Slow	Text	 Text / Goto
Reveal	 Pause / Step / Freeze	TV/AV	 AV / Input / RDS
Txt Stop	 Stop / Hold	Menu	 Menu / Home
Tone-	 << / Tune-	Menu Up	 Up
Tone+	 >> / Tune+	Info	 Info / Angle
Contrast-	 I<< / Preset-	Menu Left	 Left
Contrast+	 >>I / Preset+	OK Enter	 OK
Color- S.Std	 Sound / Title	Menu Right	 Right
Menu audio	 Audio / Lang I/II	Menu Off	 Exit / Cancel / Clear
Subt.List	 Subtitle / EQ	Menu Down	 Down
Surround	 Eject / Surround	Back	 Back / Return
Color+ P.Std	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	Display	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-



Original	Replacement	Original	Replacement
Disp	 Display / Media	Blue	 Blue / Prime Video / Random
Chan.Down	 CH- / Page-	Nicam/Mono	 Shift + Audio / Lang I/II
1	 1	4.# 16:9	 Shift + Picture / Format
2	 2	Store Text	 Shift + Setup / OPT / Tools
3	 3	Mix Scan	 Shift + Text /
4	 4	Level L	 Shift + Left
5	 5	Level R/Woofer	 Shift + Right
6	 6	Audio+	 Shift + Vol+
7	 7	Bright+ Mode	 Shift + Smart / List
8	 8	On/Tim	 Shift + CH+ /
9	 9	Audio-	 Shift + Vol-
Guide -/-- 1.	 Guide / EPG / -/--	Bright- Sys	 Shift + Display / Media
0/10	 0	Off/Tim	 Shift + CH- /
2.Fav P/C 2.	 Fav / Marker / PC	3.*	 Shift + 3
Red	 Red / Netflix / Search		
Green	 Green / APP / Repeat		
Yellow	 Yellow / YouTube / Repeat		

Original	Replacement
Blue	 Blue / Prime Video / Random
Nicam/Mono	 Shift + Audio / Lang I/II
4.# 16:9	 Shift + Picture / Format
Store Text	 Shift + Setup / OPT / Tools
Mix Scan	 Shift + Text /
Level L	 Shift + Left
Level R/Woofer	 Shift + Right
Audio+	 Shift + Vol+
Bright+ Mode	 Shift + Smart / List
On/Tim	 Shift + CH+ /
Audio-	 Shift + Vol-
Bright- Sys	 Shift + Display / Media
Off/Tim	 Shift + CH- /
3.*	 Shift + 3

