





 













 

 















Original	Replacement
 Power	 Power
 File Mode	 D.Menu / Top
 Setup	 Setup / OPT /
 Suspend	 AV / Input / RDS
 Page Up	 CH+ / Page+
 USB	 Shift + 8
 TV Mode	 TV/Radio /
 Mute	 Mute / Dimmer
 Page Down	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0	 0
 Delete	 Guide / EPG / -/-
 CAPS/NUM.	 Fav / Marker / PC
 Return	 Back / Return
 Source	 Eject / Surround
 Info	 Info / Angle
 Home	 Shift + Menu /
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Menu	 Menu / Home
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+





Original	Replacement
 Title	 Sound / Title
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Repeat	 Shift + Green / APP / REPEAT
 Angle	 Shift + Info / Angle
 Pause	 Pause / Step / Freeze
 I>	 Shift + Play /
 Time Seek	 Sleep / Timer
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random

Original	Replacement

