




Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		Vol-		Vol-
	Power		Power		OK		OK
	1		1		Right		Right
	2		2		Vol+		Vol+
	3		3		Down		Down
	4		4		CH-		CH- / Page-
	5		5		Red		Red / Netflix / Search
	6		6		EPG		Guide / EPG / -/-
	7		7		Green		Green / APP / Repeat
	8		8		Audio		Audio / Lang I/II
	9		9		Yellow		Yellow / YouTube / Repeat
	Menu		Menu / Home		Subtitle		Subtitle / EQ
	0		0		Blue		Blue / Prime Video / Random
	Exit		Exit / Cancel / Clear		TTX		Text / Goto
	Up		Up		i		Info / Angle
	CH+		CH+ / Page+		FAV		Fav / Marker / PC
	Left		Left		Tv/Radio		TV/Radio /



Program



Original		Replacement		Original		Replacement	
	Roll		Smart / List				
	Prog		Shift + TV/Radio / Program				
	Digest		Display / Media				
	Device		Picture / Format				
	Rec		Rec / Rec Mode				
	Zoom		Zoom / Size				
	Stop		Stop / Hold				
	Prev		I<< / Preset-				
	Next		>>I / Preset+				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	<<		<< / Tune-				
	>>		>> / Tune+				

