





























 
 
 











 



























Original		Replacement		Original		Replacement	
	Eject		Eject / Surround		7		7
	Power		Power		8		8
	TV/VTR		TV/Radio /		9		9
	Menu		Menu / Home		-/--		Guide / EPG / -/--
	Timer Clear		Sleep / Timer		Counter Reset		Exit / Cancel / Clear
	Up		Up		0		0
	Right		Right		Showview		Red / Netflix / Search
	Left		Left		Once		Green / APP / Repeat
	Quick Timer		Text / Goto		Vol+		Vol+
	Down		Down		Prog+		CH+ / Page+
	Execute		OK		Daily		Yellow / YouTube / Repeat
	1		1		Weekly		Blue / Prime Video / Random
	2		2		Vol-		Vol-
	3		3		Prog-		CH- / Page-
	4		4		Tracking		Shift + OK
	5		5		Tracking Normal/Slow ▼		Shift + Down
	6		6		Tracking Normal/Slow ▲		Shift + Up





Original	Replacement	Original	Replacement
	x2		Setup / OPT /
	< Frame		Shift + Left
	Frame >		Shift + Right
	> Slow -		Shift + << /
	> Slow +		Shift + >> /
	<< Search		<< / Preset-
	Search >>		>> / Preset+
	Tape Speed		D.Menu / Top
	Input Select		AV / Input / RDS
	Skip		Smart / List
	Display		Display / Media
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Stop		Stop / Hold





Original		Replacement		Original		Replacement	
	Power		Power		Display		Display / Media
	Tv/VTR		TV/Radio /				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	-/--		Guide / EPG / -/--				
	Vol+		Vol+				
	Prog+		CH+ / Page+				
	Vol-		Vol-				
	Prog-		CH- / Page-				

