 




















 
















Original	Replacement
 Power	 Power
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Source	 AV / Input / RDS
 Play/Pause / Size	 Zoom / Size
 Play/Pause / Size	 Play / Slow
 Play/Pause / Size	 Pause / Step / Freeze
 EPG	 Guide / EPG / -/--
 Audio	 Audio / Lang I/II
 R.List / Index	 Display / Media
 FAV	 Fav / Marker / PC
 Hold	 Shift + Stop /
 Red / <<<	 <<< / Tune-
 Red / <<<	 Red / Netflix / Search
 Green / I<	 I<< / Preset-
 Green / I<	 Green / APP / Repeat
 Yellow / >I	 Yellow / YouTube / Repeat

Original	Replacement
 Yellow / >I	 >>I / Preset+
 Blue / >>>	 >>> / Tune+
 Blue / >>>	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CHL	 Smart / List





Original		Replacement		Original		Replacement	
	CH-		CH- / Page-				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	Subtitle		Subtitle / EQ				
	0		0				
	Text		Text / Goto				

