



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	Sleep		Sleep / Timer
			Shift + 1
			Shift + 2
	CH.List		Smart / List

Original	Replacement	Original	Replacement
	Source		AV / Input / RDS
	Up		Up
	Audio / Nicam		Audio / Lang I/II
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Exit		Exit / Cancel / Clear
	Menu		Menu / Home
	Vol+		Vol+
	Mouse On/Off		D.Menu / Top
	CH+		CH+ / Page+
	Vol-		Vol-
	Home		Shift + Menu /
	CH-		CH- / Page-
	P.Mode		Picture / Format
	S.Mode		Sound / Title





Original	Replacement
Display	Display / Media
Fav	Fav / Marker / PC
TXT	Text / Goto
Sub / Index	Subtitle / EQ
EPG / S. Page	Guide / EPG / -/--
Size	Zoom / Size
Stop	Stop / Hold
I<<	I<< / Preset-
>>I	>>I / Preset+
Hold / Aspect	Setup / OPT /
Hold / Aspect	Shift + Stop /
Play / Pause	Play / Slow
<<	<< / Tune-
>>	>> / Tune+
Reveal / Antena	TV/Radio /
Red	Red / Netflix / Search
Green	Green / APP / Repeat

Original	Replacement
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

