 



 















 



















 





 




 




















Original	Replacement	Original	Replacement
	Power		Power
	TV Power		Shift + Power
	TV Vol+		Shift + Vol+
	TV Vol+		Vol+
	TV CH+		Shift + CH+ /
	Drive Select		Text / Goto
	TV AV		Shift + AV / Input / RDS
	TV Vol-		Shift + Vol-
	TV Vol-		Vol-
	TV CH-		Shift + CH- /
	1		1
	2		2
	3		3
	CH+		CH+ / Page+
	4		4
	5		5
	6		6
	CH-		CH- / Page-
	7		7
	8		8
	9		9
	ShowView		Picture / Format
	*/Delete		Shift + Exit / Cancel / Clear
	0		0
	Input Select		AV / Input / RDS
	Status		Info / Angle
	I<< Skip		I<< / Preset-
	Skip >>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Play / 1.3		Play / Slow
	Time Slip		Sleep / Timer





Original	Replacement
Prog / Check	TV/Radio /
Exit	Exit / Cancel / Clear
Direct Navigator	Smart / List
Left / <	Left
Up	Up
Right / >	Right
Function Menu	Menu / Home
OK	OK
Option	Setup / OPT /
Down	Down
Return	Back / Return
Red / Audio	Audio / Lang I/II
Red / Audio	Red / Netflix / Search
Green / Display	Display / Media
Green / Display	Green / APP / Repeat
Yellow / Create Chapter	Yellow / YouTube / Repeat
Blue / Manual Skip	Blue / Prime Video / Random

Original	Replacement
Rec	Rec / Rec Mode
Rec Mode	Shift + Rec / Rec Mode
Ext Link	D.Menu / Top
Direct Tv Rec	Eject / Surround

