

 

 

 





 

 

 

 

 









 

 

 

 

 



 

 

 

 

 



 
 


 











 

 





 







 

 
 





 

 








Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Power Tv	 Shift + Power	 9	 9
 Tv/AV Tv	 Shift + AV / Input / RDS	 Vol+	 Vol+
 Vol+ Tv	 Shift + Vol+	 Cancel	 Exit / Cancel / Clear
 DVD	 Shift + 2	 0	 0
 FM	 TV/Radio /	 +10	 Guide / EPG / -/-
 EXT-IN	 AV / Input / RDS	 Vol-	 Vol-
 Vol- Tv	 Shift + Vol-	 I<< Skip	 I<< / Preset-
 1	 1	 Skip >>I	 >>I / Preset+
 2	 2	 << Slow/Search	 << / Tune-
 3	 3	 Slow/Search >>	 >> / Tune+
 Select >	 CH+ / Page+	 Stop	 Stop / Hold
 4	 4	 Pause	 Pause / Step / Freeze
 5	 5	 Play	 Play / Slow
 6	 6	 Quick OSD	 Red / Netflix / Search
 Select <	 CH- / Page-	 [ I ] VS	 Green / APP / Repeat
 7	 7	 One Touch Play	 Fav / Marker / PC





Original	Replacement	Original	Replacement
 Top Menu/Direct Navigator	 D.Menu / Top	 Zoom	 Zoom / Size
 Up	 Up	 Manual Skip	 Yellow / YouTube / Repeat
 Functions	 Smart / List	 Page/Angle	 Shift + Setup / OPT / Tools
 <II/Left	 Left	 Subtitle	 Subtitle / EQ
 Enter	 OK	 Setup	 Setup / OPT /
 Right/II>	 Right	 Sleep	 Sleep / Timer
 Menu/Play List	 Menu / Home	 FL.Display	 Display / Media
 Down	 Down	 Muting	 Mute / Dimmer
 Return	 Back / Return		
 Level/Subwoofe	 Sound / Title		
 EQ	 Shift + Subtitle / EQ		
 H.Bass	 Info / Angle		
 Group	 Picture / Format		
 Audio	 Audio / Lang I/II		
 Repeat	 Shift + Green / APP /		
 Play Mode	 Text / Goto		
 Quick Replay	 Blue / Prime Video / Random		

