





















 



 
 


 







Original	Replacement
	 Power
	 AV / Input / RDS
	 Shift + 1
	 Shift + Yellow / YouTube /
	 Shift + Blue / Prime
	 Shift + 4
	 Shift + 5
	 Shift + 6
	 Shift + 7
	 Shift + 8
	 Shift + Red / Netflix /
	 Shift + 2
	 Shift + 3
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat

Original	Replacement
	 Blue / Prime Video / Random
	 D.Menu / Top
	 Up
	 Play / Slow
	 Pause / Step / Freeze
	 Left
	 OK
	 Right
	 Back / Return
	 Down
	 Exit / Cancel / Clear
	 Vol+
	 Menu / Home
	 CH+ / Page+
	 Vol-
	 Display / Media
	 CH- / Page-





Original	Replacement
 Subtitle	 Subtitle / EQ
 Mute	 Mute / Dimmer
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Guide	 Guide / EPG / -/--
 0	 0
 CH.List	 Smart / List

Original	Replacement

