































 



Original	Replacement	Original	Replacement
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Off	 Exit / Cancel / Clear
Reveal	 Play / Slow	Menu Down	 Down
Update	 Pause / Step / Freeze	Back	 Back / Return
Txt Stop	 Stop / Hold	Volume+	 Vol+
Tone+	 >> / Tune+	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Return TV	 TV/Radio /	1	 1
Text	 Text / Goto	2	 2
TV/AV	 AV / Input / RDS	3	 3
Menu	 Menu / Home	4	 4
Menu Up	 Up	5	 5
Info	 Info / Angle	6	 6
Menu Left	 Left	7	 7
OK Enter	 OK	8	 8



Original	Replacement	Original	Replacement
9	9		
Guide -/-- 1.	Guide / EPG / -/--		
0/10	0		
2.Fav P/C 2.	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		

