 

 





 

 





































 

 











 



 





| Original | Replacement |
|--|---|
|  Standby |  Power |
|  Open/Close |  Eject / Surround |
|  Setup |  Setup / OPT / |
|  Angle |  Info / Angle |
|  Random |  Blue / Prime Video / Random |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  +10 |  Guide / EPG / -/- |
|  Language |  Audio / Lang I/II |

| Original | Replacement |
|---|--|
|  Display |  Display / Media |
|  Title |  Sound / Title |
|  Menu |  Menu / Home |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Search |  Red / Netflix / Search |
|  Repeat |  Green / APP / Repeat |
|  A-B |  Yellow / YouTube / Repeat |
|  Zoom |  Zoom / Size |
|  Pause |  Pause / Step / Freeze |
|  Stop |  Stop / Hold |
|  Play |  Play / Slow |
|  Vol+ |  Vol+ |
|  I<< |  I<< / Preset- |





| | Original | Replacement | | Original | Replacement |
|--|--------------|-------------------|--|----------|-------------|
| | >> | >> / Preset+ | | | |
| | Vol- | Vol- | | | |
| | << | << / Tune- | | | |
| | >> | >> / Tune+ | | | |
| | Resume | Smart / List | | | |
| | Subtitle | Subtitle / EQ | | | |
| | Slow | + Shift + Play / | | | |
| | Program | TV/Radio / | | | |
| | Vocal-Assist | Picture / Format | | | |
| | PBC | D.Menu / Top | | | |
| | Mute | Mute / Dimmer | | | |
| | P/I | AV / Input / RDS | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |
| | | | | | |

| | Original | Replacement |
|--|----------|-------------|
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |
| | | |

